

EN

CUBOO HEATER
XL

Manual

Battery Installation

Choose 2 pieces of flat top 21700 batteries. (Molicel/NPE INR-21700-P45A 4200mAh)
Insert the batteries into the device according to the +/- polarity indicators.

Ceramic Insert Adjustment

Use your heated device to press the ceramic insert inside the glass tube.
This allows you to adjust the height of the ceramic insert.

Power ON/OFF

Press the power button three times within two seconds to turn the device on or off.

Timer Adjustment

Press the „+“ or „-“ button to set the timer (range: 10 - 60 seconds).

Power Adjustment

Double-click the power button to enter power setting mode (range: 30W - 100W).
Use the „+“ or „-“ button to select your desired power level.

Additional Functions:

Press the „+“ button and „-“ button together to flip the screen 180°.
Press the „-“ button and power button together to turn the coil chamber light on or off.
Press the „+“ button and power button together to reset the session counter.


Ready to use:

Once all settings are configured, the Cuboo Heater XL will activate automatically based on the selected power level.
If the batteries can not support the current power level, or the heated material is not inductive enough, the device will automatically reduce power and display „MAX Power“ indicating the maximum workable power under current conditions.

Manufacturer:
YLLVAPE Technology Co.,Ltd.
Block A2 HuaFeng
Intelligence Valley
Hangcheng Street
Baoan District
517100 Shenzhen China

Importer:
VDN Berlin GmbH
KarL-Kunger Str. 28
12435 Berlin
Germany

CE RoHS

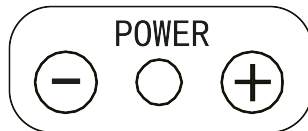

DE

CUBOO HEATER
XL

Anleitung

Batterie

Wähle 2 21700 Akkus mit flachen Böden. (Molicel/NPE INR-21700-P45A 4200mAh)
Setze die Akkus in das Gerät ein und beachte dabei die Anzeichen der +/- Pole.

Keramikeinsatz Einstellung

Nutze das aufgeheizte Gerät um den Keramikeinsatz in das Glasröhrchen zu stecken.
Das ermöglicht das einstellen der Höhe des Keramikeinsatzes.

Ein/Aus-schalten

Betätige die POWER Taste drei mal innerhalb von 2 Sekunden,
um das Gerät einzuschalten.

Timer Einstellung

Betätige die „+“ oder „-“ Taste im die Timer Einstellung anzupassen (10 - 60 Sekunden)

Leistungseinstellung

Betätige die POWER Taste zwei mal aufeinanderfolgend, um den Leistungsmodus zu aktivieren (Bereich: 30W - 100W).
Verwende die „+“ oder „-“ Taste, um die gewünschte Leistung einzustellen.

Zusätzliche Funktionen:

Drücke die „+“ Taste und die „-“ Taste gleichzeitig, um den Bildschirm um 180° zu drehen.
Drücke die „-“ Taste und die POWER Taste gleichzeitig, um das Licht in der Heizkammer ein- oder auszuschalten.
Drücke „+“ und die POWER Taste gleichzeitig, um den Session-Counter zurückzusetzen.

Bereit zur Verwendung:

Sobald alle Einstellungen vorgenommen wurden, aktiviert sich der Cuboo Heater V3 automatisch entsprechend der gewählten Leistungsstufe.
Wenn die Akkus die aktuelle Leistung nicht unterstützen können oder das erhitzte Material nicht ausreichend induktiv ist, reduziert das Gerät die Leistung automatisch und zeigt „MAX Power“ an - dies weist auf die maximale mögliche Leistung unter den aktuellen Bedingungen hin.

